

Check Water Level Every Week



1. The drain screens must be removed to check the water level.



2. Water level is low if you can see the top of the drain pipe as shown above.



3. Add water by pouring directly into drain. Use warm water to speed heating time.



4. Water level is correct when you cannot see the top of the drain pipe as shown above.

Note: When the water level is too low, no oil will come out of the Oil Purge Valve when attempting to purge oil.



70 King Street
Elk Grove Village, IL 60007
847-437-1100