

# Heater Thermostat Adjustment Instructions

## Overview

The Drum Heater Thermostat is factory set at 110 degrees. It is possible that the Thermostat will need adjustment to get the optimum temperature for cleaning.

Discuss your specific conditions with your Grease Gator

Sales Rep and they will be able to advise you on the correct course of action to address specific water temperature issues.

If you do need to adjust the Drum Heater Thermostat, follow these instructions to guide you through the process.

## Step 1: Open the Thermostat Control Compartment Cover Panel

- 1) The Thermostat Control Compartment is located at the end of the heater channel where the power cord enters the channel (Figure 1).
- 2) Remove the two screws holding the Thermostat Control Compartment Cover Panel in place. After you remove the panel you will see the Thermostat Control (Figure 2). Be sure to keep track of the cover panel and screws.



Figure 1

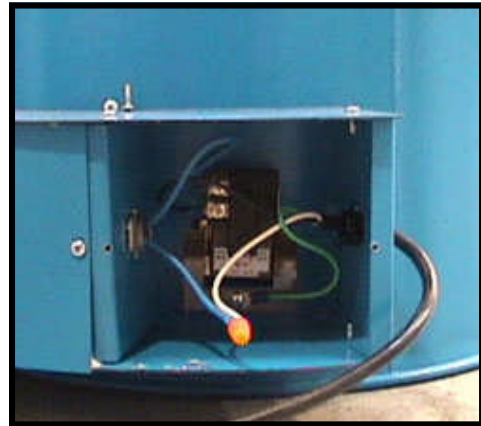


Figure 2

## Step 2: Adjust the Thermostat Control

The temperature degree calibrations are marked on the Thermostat Control (Figure 3). Using a flat head screwdriver, turn the set screw on the Thermostat Control so that the top part of the flat head screw slot is pointing to the desired temperature.

The amount of temperature change that is made should depend on the current temperature of the solution. Allow several hours for the change in temperature to be achieved and to determine if further temperature changes are required.

When complete, replace the Thermostat Control Compartment Cover Panel.



Figure 3

